



12. The left hand selvage is trimmed in the same manner as the right. It is important that the proper blade is used on every cut so the Cutter will cut close to the pile rows where they join together at the seam.

CROWN RENTAL
FOR ALL YOUR RENTAL NEEDS

SERVING 2 LOCATIONS

BURNSVILLE

1018 E. CLIFF RD.

194-RENT

0ad

5337

ROSEMOUNT

3320 151ST ST. W.

423-RENT

Manufactured by -

Roberts Consolidated Industries


City of Industry, CA 91749

Made in U.S.A.

INSTRUCTIONS FOR USING THE

10-152

LOOP-PILE CUTTER

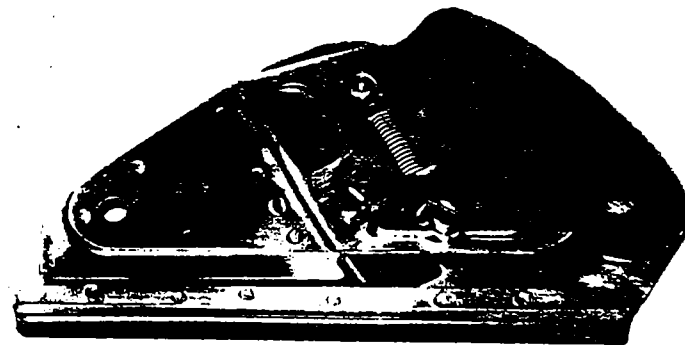

USING THE LOOP PILE CUTTER


Your Loop Pile Cutter has been delivered to you with a package of Slotted Razor Blades.

Before using this Cutter, you must insert two of these blades into the blade slots in the following manner.


1. Remove the front thumb screw on the Cutter.
2. Insert one blade into each of the two open slots that are on the top of the Cutter in front of the handle.
3. Move both blades downward in the slots to permit the replacement of the set screw thru slot in blades and into the nut.

1141-294

USING LOOP PILE CUTTER (continued)

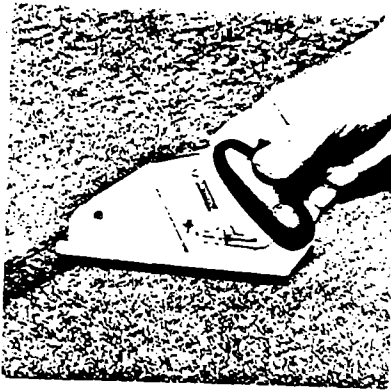

4. The Loop Pile Cutter with the throat closed.

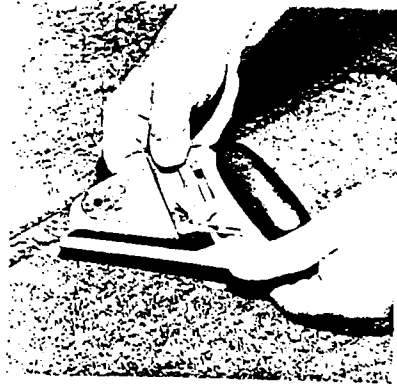


5. The Loop Pile Cutter with the throat open.




6. Hold the Cutter as shown to open the guide slot. Place the Cutter as shown with the guide bar between 2 rows of pile, and allow the spring tension to close the slot to the proper width. (Do not press downward with the right hand as this will make the slot too narrow).



7. Tighten the rear thumb screw to lock the setting.

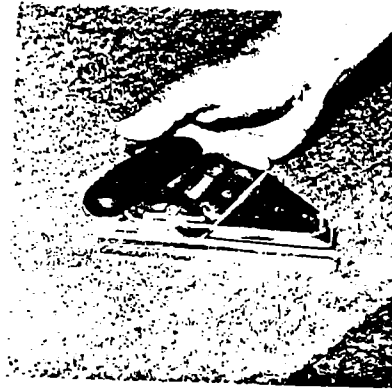


8. The blade on the left hand side of the knife is now placed in the proper position against the blade rest. (Note: Do not place both blades in the cutting position at the same time.) The corner of the blade must fit down INTO the notch in the base plate. Tighten the front thumb screw to clamp the blade in position.

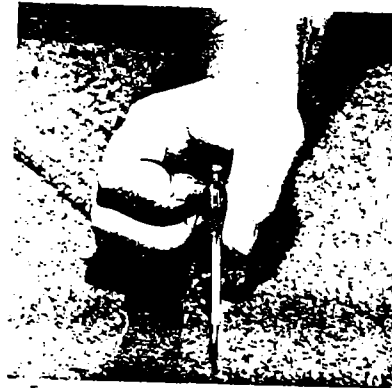

10. Press the base plate of the Cutter firmly against the floor with the right hand when making the cut. Do not permit the guide bar to cross a row of pile loops.



9. The guide bar on the Cutter is now started between the two rows of pile where the cut is to be made. Be sure that the blade is close to the finish side of the cut.

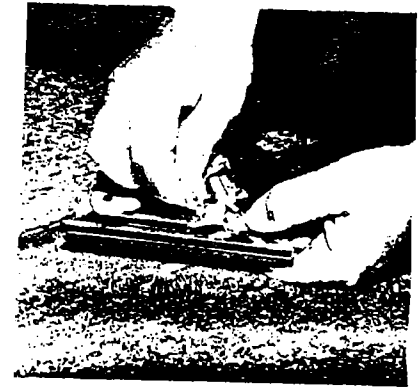

11. To trim the left hand selvage, loosen the front thumb screw and retract the blade on the left side of the Cutter. Position the blade on the right side of the Cutter as shown and tighten the thumb screw to hold it in its proper position with corner in the notch provided.