

## BILLY GOAT MOWER

### Safety Instructions:

- \* Make sure you read all instructions and warnings before operating machine. Failure to do so may result in injury to operator or equipment.
- \* Always wear protective gear and clothing when operating machine. Eye, ear, hand and foot protection. Do not wear loose clothing that may be caught in tines or any other part of the machine.
- \* Only one operator on the machine at a time. Keep other people and objects clear of the machine at all times.
- \* Do not leave machine unattended while running.
- \* Always inspect area to be mowed before operating. Remove large objects not intended to be mowed. Mark all sprinkler heads and water valves.
- \* Make sure all clutches are disengaged before starting.
- \* Machine takes unleaded fuel only. Do not smoke when refueling and make sure engine is off. Do not overfill.

### OPERATION

1. Familiarize yourself with the location and function of all clutches, levers and switches before using.

2. The shift lever is located directly behind the motor. There are 2 ground speeds: Neutral and reverse. To engage reverse requires lifting the shift lever up and turning the lever to the left. All other gears are accessed on the lower level moving side to side. Place the shift lever in neutral before starting motor.

3. The mower will not propel until it is in gear and the driver lever, located on the right handle, is pulled up. Never shift gears with the driver lever pulled up.

4. To engage the cutting blade, simply depress the blade lever located on the left handle. To stop the blade simply let go. Only engage the blade when intending to mow. Do not engage the blade during transport or loading.

5. To start the engine, pull out the throttle to its maximum point and lock over to the right. This is the choke position for a cold start.

6. Flip ON/OFF switch to the ON position.

7. Pull the recoil all the way through with both hands and firm footing. When the engine begins to fire, unlock the throttle and lower it out of the choke position to the high throttle. This adjustment is a difference of approximately one-quarter inch.

8. Always operate the mower at a high throttle for maximum performance.

9. When mowing hill or steep slopes, always mow up and down the hill not side to side for stability.

10. In case of emergency immediately let go of both handles and turn off engine.

NEVER ATTEMPT TO "FIX" ANYTHING. ALL REPAIRS WILL BE DONE BY A CROWN RENTAL EMPLOYEE.

IF YOU HAVE ANY QUESTIONS OR PROBLEMS, PLEASE CALL CROWN RENTAL @ 952-894-7368 BURNSVILLE OR 651-423-7368 ROSEMOUNT .