



Game Instruction for:

STRIKE 3!

Step 1: Open case and remove game graphic bottom board. Remove legs and screw them in. Replace bottom board.



Step 2: remove the catcher and insert the pins into the bottom board, Place wingnuts on the pins and tighten.



Step 2: Players toss balls at the catcher and try to hit the catcher's mitt.



- * Do not sit or stand on case games.
- ** If you have an event on a windy day, The wind might blow the game over. To prevent this from happening The front leg can be filled with water for extra weight.

All games and game graphics are the copyright of The Brothers Grimm. No part of the games or graphics may be used or copied without the express written permission of The Brothers Grimm. All Sculpted elements are the copyright of The Brothers Grimm and may not be reproduced.